


Frameless Flat Rooflight

- Unpackage the rooflight by removing the protective corners.
- Check the upstand is flat using glazing packers - the pitch is between 3 - 5 degrees and is clean ready for the sealant to be applied.
- Apply a bead of sealant around the top edge of the upstand, make sure the bed of sealant is 10 - 12mm high and runs all the way around using suitable sealant for membrane application. Lower the rooflight over the upstand into position and press down firmly making sure there is a good adhesion all the way around.
- Once you are happy with it's position, bend the internal straps down and fasten into position with screws.

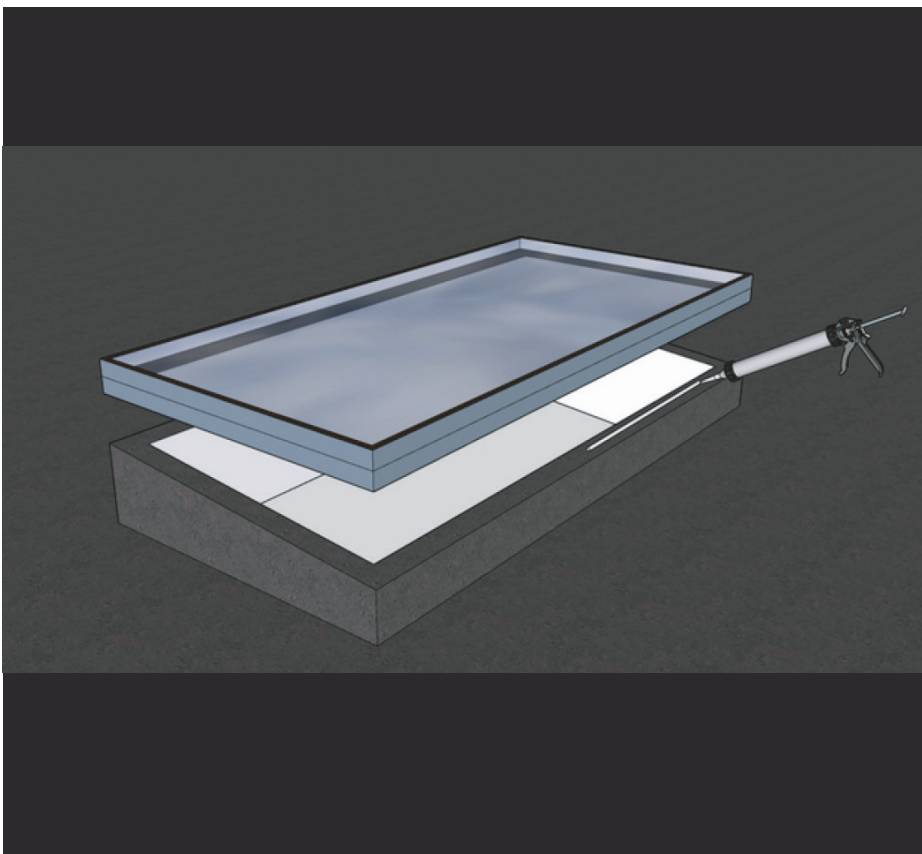

Item List

Check the item list to make sure you have all the parts to carry out the installation for the frameless flat rooflight.

If you have any of the parts missing then please contact the manufacturers for advice.

- Cordless screwdriver
- Stanley knife
- Glass suckers x 4
- Sealant gun
- Sealant for application screws.